



SDK API Manual

Version 2.5.10

Netmodule AG, Switzerland

February 25, 2026





Contents

1	Introduction	7
2	API functions	8
2.1	Serial	8
2.1.1	nb_serial_getattr	8
2.1.2	nb_serial_setattr	8
2.1.3	nb_serial_write	8
2.1.4	nb_serial_read	9
2.2	Media	9
2.2.1	nb_media_mount	9
2.2.2	nb_media_umount	9
2.2.3	nb_media_getmount	9
2.3	Modbus	10
2.3.1	nb_modbus_register	10
2.3.2	nb_modbus_unregister	10
2.3.3	nb_modbus_set_slave	10
2.3.4	nb_modbus_flush	10
2.3.5	nb_modbus_last_error	11
2.3.6	nb_modbus_set_debug	11
2.3.7	nb_modbus_send_raw	11
2.3.8	nb_modbus_reply_raw_response	11
2.3.9	nb_modbus_extract_payload	12
2.3.10	nb_modbus_read_bits	12
2.3.11	nb_modbus_read_input_bits	12
2.3.12	nb_modbus_read_regs	12
2.3.13	nb_modbus_read_input_regs	13
2.3.14	nb_modbus_write_bits	13
2.3.15	nb_modbus_write_input_bits	13
2.3.16	nb_modbus_write_regs	14
2.3.17	nb_modbus_write_input_regs	14
2.3.18	nb_modbus_receive	14
2.3.19	nb_modbus_reply	14
2.4	SMS	15

2.4.1	nb_sms_send	15
2.4.2	nb_sms_sendmsg	16
2.4.3	nb_sms_list	16
2.4.4	nb_sms_retrieve	16
2.4.5	nb_sms_header	16
2.4.6	nb_sms_body	17
2.4.7	nb_sms_delete	17
2.5	E-Mail	17
2.5.1	nb_email_send	17
2.5.2	nb_mail_list	18
2.5.3	nb_mail_delete	18
2.5.4	nb_mail_fetch	18
2.5.5	nb_mail_send	19
2.6	Digital I/O	19
2.6.1	nb_dio_get	19
2.6.2	nb_dio_set	19
2.6.3	nb_dio_count	20
2.6.4	nb_dio_summary	20
2.7	Configuration	20
2.7.1	nb_config_get	20
2.7.2	nb_config_set	20
2.7.3	nb_config_done	21
2.7.4	nb_config_summary	21
2.8	Status Information	21
2.8.1	nb_status	21
2.8.2	nb_status_summary	22
2.9	Network Scanning	23
2.9.1	nb_scan_networks	23
2.10	USSD Queries	23
2.10.1	nb_ussd_query	23
2.11	File Transfers	23
2.11.1	nb_transfer_get	24
2.11.2	nb_transfer_put	24
2.11.3	nb_transfer_post	25
2.11.4	nb_transfer_list	25
2.11.5	nb_transfer_delete	26
2.12	LED	27
2.12.1	nb_led_acquire	27
2.12.2	nb_led_release	27
2.12.3	nb_led_set	27
2.13	Config/Software Update	28
2.13.1	nb_update_status	28

2.13.2	nb_update_config	29
2.13.3	nb_update_software	29
2.13.4	nb_update_sshkeys	29
2.14	Web Pages	29
2.14.1	nb_page_register	29
2.14.2	nb_userpage_register	30
2.14.3	nb_page_unregister	30
2.14.4	nb_page_request	30
2.14.5	nb_page_respond	30
2.14.6	nb_page_finish	31
2.15	Voice	31
2.15.1	nb_voice_event	32
2.15.2	nb_voice_endpoint_list	33
2.15.3	nb_voice_endpoint_get	33
2.15.4	nb_voice_call_list	33
2.15.5	nb_voice_call_get	33
2.15.6	nb_voice_call_dial	33
2.15.7	nb_voice_call_accept	34
2.15.8	nb_voice_call_route	34
2.15.9	nb_voice_call_hangup	34
2.15.10	nb_voice_call_volume	34
2.16	SNMP	35
2.16.1	nb_snmp_register	35
2.16.2	nb_snmp_link	35
2.16.3	nb_snmp_update	36
2.16.4	nb_snmp_listen	36
2.16.5	nb_snmp_unlink	36
2.16.6	nb_snmp_host	36
2.16.7	nb_snmp_get	37
2.16.8	nb_snmp_set	37
2.16.9	nb_snmp_traphost	37
2.16.10	nb_snmp_trap	38
2.16.11	nb_snmp_inform	38
2.17	MQTT	38
2.17.1	nb_mqttlib_new	38
2.17.2	nb_mqttlib_free	39
2.17.3	nb_mqttlib_set_protocol_version	39
2.17.4	nb_mqttlib_set_tls	39
2.17.5	nb_mqttlib_set_tls_insecure	40
2.17.6	nb_mqttlib_set_user_pw	40
2.17.7	nb_mqttlib_get_callback_connect	41
2.17.8	nb_mqttlib_get_callback_message	41

2.17.9	nb_mqttlib_get_callback_subscribe	42
2.17.10	nb_mqttlib_get_callback_unsubscribe	42
2.17.11	nb_mqttlib_connect	43
2.17.12	nb_mqttlib_disconnect	43
2.17.13	nb_mqttlib_publish	44
2.17.14	nb_mqttlib_set_will	45
2.17.15	nb_mqttlib_clear_will	45
2.17.16	nb_mqtt_publish	45
2.17.17	nb_mqttlib_subscribe	46
2.17.18	nb_mqttlib_unsubscribe	48
2.18	CAN	48
2.18.1	nb_can_setattr	48
2.18.2	nb_can_open	49
2.18.3	nb_can_close	49
2.18.4	nb_can_setfilter	49
2.18.5	nb_can_sendonly	50
2.18.6	nb_can_recvmsg	50
2.18.7	nb_can_sendmsg	50
2.19	Bluetooth	51
2.19.1	nb_bt_dev_list	51
2.19.2	nb_bt_dev_info	51
2.19.3	nb_bt_dev_del	52
2.19.4	nb_bt_ada_property_getall	52
2.19.5	nb_bt_ada_property_set	53
2.19.6	nb_bt_adv_property_getall	54
2.19.7	nb_bt_adv_property_set	54
2.19.8	nb_bt_mode	55
2.20	Network	55
2.20.1	nb_gethostbyname	55
2.20.2	nb_ifc_address	56
2.20.3	nb_ping	56
2.20.4	nb_arp_ping	56
2.20.5	nb_arp_gratuitous	56
2.20.6	nb_etherwake	57
2.21	OPC-UA	57
2.21.1	nb_opcua_connect	57
2.21.2	nb_opcua_browse	57
2.21.3	nb_opcua_search	58
2.21.4	nb_opcua_read	58
2.21.5	nb_opcua_write	58
2.21.6	nb_opcua_disconnect	59
2.22	Certificates	59

2.22.1	nb_cert_install	59
2.22.2	nb_cert_create	59
2.22.3	nb_cert_enroll	60
2.22.4	nb_cert_renew	60
2.22.5	nb_cert_is_revoked	60
2.22.6	nb_cert_erase	60
2.22.7	nb_cert_read	61
2.23	Other	61
2.23.1	nb_syslog	61
2.23.2	nb_syslog_p	61
2.23.3	nb_event_get	62
2.23.4	nb_event_msg	62
2.23.5	nb_reboot	62
2.23.6	nb_restart	63
2.23.7	nb_wakeup	63
2.23.8	nb_poweroff	63
2.23.9	nb_reset_factory	63
2.23.10	nb_reset_statistics	63
2.23.11	nb_wlan_tracking	64
2.23.12	nb_wanlink_activate	64
2.23.13	nb_wanlink_deactivate	64
2.23.14	nb_wanlink_priorize	64
2.23.15	nb_wanlink_weight	65
2.23.16	nb_reset_debug_level	65
2.23.17	nb_set_debug_level	65
2.23.18	nb_get_debug_level	65



1 Introduction

This manual describes the SDK API extensions to the standard library of version #SDK_VERSION### They provide a range of general-purpose extensions for the Arena scripting language.

The current version ships with the following features:

- Send and retrieve SMS
- Send E-mail
- Read or write from or to a serial device
- Control digital input/output ports
- Run TCP/UDP servers
- Run IP/TCP/UDP clients
- Access files of mounted media (e.g. an USB stick)
- Retrieve status information from the system
- Get or set configuration parameters
- Write to syslog
- Transfer files over HTTP/FTP
- Perform config/software updates
- Control LEDs
- Get system events, restart services or reboot system
- Scan for networks in range
- Create your own web pages
- Voice control functions
- SNMP functions
- CAN socket functions
- Bluetooth functions
- Various network-related functions
- OPC-UA functions
- Other system-related functions

2 API functions

2.1 Serial

2.1.1 nb_serial_getattr

```
struct nb_serial_getattr (string dev)
```

The nb_serial_getattr function retrieves the current attributes of a serial device.

dev	serial device (e.g. serial0 for first device)
-----	---

Returns a struct containing values for baudrate, databit, stopbit, parity, flowctl or void on error.

2.1.2 nb_serial_setattr

```
int nb_serial_setattr (string dev, int b, int d, int s, int p, int f)
```

The nb_serial_setattr function can be used to set the attributes of a serial device.

dev	serial device (e.g. serial0 for first device)
b	baudrate (e.g. 9600, 19200, 38400, 57600, 115200)
d	number of data bits (5, 6, 7, 8)
s	number of stop bits (1, 2)
p	parity (0=no parity, 1=odd parity, 2=even parity)
f	flow control (0=none, 1=xon/xoff, 2=hardware)

Returns -1 on error, otherwise zero.

2.1.3 nb_serial_write

```
int nb_serial_write (string dev, string msg)
```

The nb_serial_write function can be used for writing a message directly to a serial device.

dev	serial device (e.g. serial0 for first device)
msg	message to be written

Returns number of bytes written or -1 on error.

2.1.4 nb_serial_read

```
string nb_serial_read (string dev)
```

The nb_serial_read function can be used to read a message from a serial device.

dev serial device (e.g. serial0 for first device)

Returns the string received from the serial port or an empty string in case of errors.

2.2 Media

2.2.1 nb_media_mount

```
int nb_media_mount (string dev)
```

The nb_media_mount function mounts the specified media device.

dev device name

Returns 0 on success and -1 on error. The media will be mounted to /mnt/media/usb0 for instance. You may use any IO functions afterwards to operate on it.

Available media devices:

usb0	first USB device
storage0	first extended storage device

2.2.2 nb_media_umount

```
int nb_media_umount (string dev)
```

The nb_media_umount function unmounts the specified media device.

dev device name (e.g usb0, storage0)

Returns -1 on error.

2.2.3 nb_media_getmount

```
string nb_media_getmount (void)
```

The `nb_media_getmount` function returns a list of any currently mounted media including the corresponding mountpoint (i.e. in the form "<media> on <path>"). If nothing is mounted (or in case of an error) an empty string will be returned.

2.3 Modbus

2.3.1 `nb_modbus_register`

```
int nb_modbus_register (int fd, int type)
```

This function will register a file descriptor (as returned by `open` or `accept`) to the modbus subsystem.

<code>fd</code>	file descriptor
<code>type</code>	can be either <code>MODBUS_TYPE_TCP</code> or <code>MODBUS_TYPE_RTU</code>

On success, the function returns 0. Otherwise -1.

2.3.2 `nb_modbus_unregister`

```
int nb_modbus_unregister (int fd)
```

This function unregisters a previously registered file descriptor.

<code>fd</code>	file descriptor
-----------------	-----------------

On success, the function returns 0. Otherwise -1.

2.3.3 `nb_modbus_set_slave`

```
int nb_modbus_set_slave (int fd, int slave)
```

The `nb_modbus_set_slave` function applies the local slave identifier number which is required when communicating in RTU mode or communicating via Modbus-TCP - RTU Gateway.

<code>fd</code>	file descriptor
<code>slave</code>	slave identifier

The function will return zero if successful. Otherwise it returns -1, the error can be figured out using `nb_modbus_last_error`.

2.3.4 `nb_modbus_flush`

```
int nb_modbus_flush (int fd)
```

The nb_modbus_flush function will discard any data received without reading from the file descriptor.

fd	file descriptor
----	-----------------

The function will return zero or the number of flushed bytes in case of success. Otherwise it returns -1, the error can be figured out using nb_modbus_last_error.

2.3.5 nb_modbus_last_error

```
string nb_modbus_last_error (void)
```

The nb_modbus_last_error function show the last occurred error.

2.3.6 nb_modbus_set_debug

```
void nb_modbus_set_debug (int fd, bool flag)
```

The nb_modbus_set_debug function enables or disables the debug mode.

fd	file descriptor
flag	true for enabled or false for disabled

2.3.7 nb_modbus_send_raw

```
array nb_modbus_send_raw (int fd, array request)
```

The nb_modbus_send_raw function sends the request to the associated descriptor and receives the confirmation.

fd	file descriptor
request	modbus raw request

The functions returns the modbus confirmation if successful. Otherwise it will return void.

2.3.8 nb_modbus_reply_raw_response

```
int nb_modbus_reply_raw_response (int fd, array response)
```

The nb_modbus_reply_raw_response function will reply to a modbus request.

fd	file descriptor
response	the raw modbus response

The `nb_modbus_replay_raw_response` function will return the number of bytes sent on success. Otherwise it will return -1.

2.3.9 nb_modbus_extract_payload

```
array nb_modbus_extract_payload (int fd, array request)
```

The `nb_modbus_extract_payload` function extracts the payload from a given request.

fd	file descriptor
request	modbus request

It returns the extracted payload from the request if successful, otherwise void.

2.3.10 nb_modbus_read_bits

```
array nb_modbus_read_bits (int fd, int addr, int len)
```

The `nb_modbus_read_bits` function reads the status of the bits from the remote device.

fd	file descriptor
addr	address of bits to read
len	length of data to read

The function returns the number of read status bits/registers if successful, otherwise it returns -1.

2.3.11 nb_modbus_read_input_bits

```
array nb_modbus_read_input_bits (int fd, int addr, int len)
```

The `nb_modbus_read_input_bits` function reads the input bits from the remote device.

fd	file descriptor
addr	address of bits to read
len	length of data to read

The function returns the number of read input bits if successful, otherwise it returns -1.

2.3.12 nb_modbus_read_regs

```
array nb_modbus_read_regs (int fd, int addr, int len)
```

The `nb_modbus_read_regs` function reads the status of the registers from the remote device.

fd	file descriptor
addr	address of registers to read
len	length of data to read

The function returns the number of read status registers if successful, otherwise -1.

2.3.13 nb_modbus_read_input_regs

```
array nb_modbus_read_input_regs (int fd, int addr, int len)
```

The nb_modbus_read_input_regs function reads the input registers from the remote device.

fd	file descriptor
addr	address of registers to read
len	length of data to read

The function returns the number of read input registers if successful, otherwise -1.

2.3.14 nb_modbus_write_bits

```
int nb_modbus_write_bits (int fd, int addr, int length, array data)
```

The nb_modbus_write_bits function writes the status of bits to the remote device.

fd	file descriptor
addr	address of bits to write
length	length of array
data	array to write

The function returns the number of bits written if successful, otherwise -1.

2.3.15 nb_modbus_write_input_bits

```
int nb_modbus_write_input_bits (int fd, int addr, int length, array data)
```

The nb_modbus_write_bits function writes the status of input bits to the remote device.

fd	file descriptor
addr	address of input bits to write
length	length of array
data	array to write

The function shall return the number of written bits if successful, otherwise -1.

2.3.16 nb_modbus_write_regs

```
int nb_modbus_write_regs (int fd, int addr, int length, array data)
```

The nb_modbus_write_regs function writes the status of the registers to the remote device.

fd	file descriptor
addr	address of registers to write
length	length of array
data	array to write

The function returns the number of written bits if successful, otherwise -1.

2.3.17 nb_modbus_write_input_regs

```
int nb_modbus_write_input_regs(int fd, int addr, int length, array data)
```

The nb_modbus_write_input_regs function writes the status of the input registers to the remote device.

fd	file descriptor
addr	address of input registers to write
length	length of array
data	array to write

The function returns the number of written bits if successful, otherwise -1.

2.3.18 nb_modbus_receive

```
int nb_modbus_receive (int fd)
```

The nb_modbus_receive function will receive an indication request from the specified descriptor. This function is used by a modbus slave/server to receive and analyze indication requests sent by the masters/clients.

fd	file descriptor
----	-----------------

The function returns the received indication request.

2.3.19 nb_modbus_reply

```
int modbus_reply (int fd, array req, struct resp)
```

The nb_modbus_reply function sends a response for a received request (as returned by nb_modbus_receive) to the specified descriptor.

fd file descriptor
 req request
 resp response struct made up as follows:

```
resp = mkstruct(
    "bits", mkarray
    (
        0, 0, 0, 1, 1, 1, 1,
        0, 0, 0, 1, 1, 1, 1
    ),
    "ibits", mkarray
    (
        1, 0, 1, 0, 1, 0, 1,
        1, 0, 1, 0, 1, 0, 1
    ),
    "regs", mkarray
    (
        0x0000 0x0001, 0x0002, 0x0003, 0x0004, 0x0005, 0x0006, 0x0007,
        0x0008, 0x0009, 0x000A, 0x000B, 0x000C, 0x000D, 0x000E, 0x000F
    ),
    "iregs", mkarray
    (
        0xFF00, 0xFF01, 0xFF02, 0xFF03, 0xFF04, 0xFF05, 0xFF06, 0xFF07,
        0xFF08, 0xFF09, 0xFF0A, 0xFF0B, 0xFF0C, 0xFF0D, 0xFF0E, 0xFF0F
    )
);
```

Representation:
 "bits" => Discrete Output Coils
 "ibits" => Discrete Input Contacts
 "regs" => Analog Output Holding Registers
 "iregs" => Analog Input Registers

2.4 SMS

Please note that the SMS daemon must be properly configured prior to using the functions below.

2.4.1 nb_sms_send

```
string nb_sms_send (string number, string msg)
```

The nb_sms_send function can be used to send an SMS to the specified number.

number	recipient's phone number
msg	the message to be sent

Returns the resulting message identifier on success or an empty string on error.

2.4.2 nb_sms_sendmsg

```
string nb_sms_sendmsg (struct msg)
```

The nb_sms_send function can be used to send an SMS with parameters specified in the struct msg which includes the following fields:

number	recipient's phone number
report	request delivery report (if set to yes)
gateway	the SMS gateway used for sending the message
sim	the SIM over which the message shall be sent
modem	the modem used for sending (deprecated)
msg	the message to be sent

Returns the resulting message identifier on success or an empty string on error.

2.4.3 nb_sms_list

```
array nb_sms_list (void)
```

The nb_sms_list function can be used to retrieve the list of messages in the inbox. Returns an array of message identifiers.

2.4.4 nb_sms_retrieve

```
string nb_sms_retrieve (string id)
```

The nb_sms_retrieve function returns the message text of the specified message identifier.

id	the message identifier
----	------------------------

2.4.5 nb_sms_header

```
string nb_sms_header (string id, string tag)
```

The nb_sms_header function returns the headers of a given message identifier.

id	the message identifier
tag	a specific header tag (such as "From")

Returns the value of the specified header tag or all headers (if tag omitted) or an empty string on error.

2.4.6 nb_sms_body

```
string nb_sms_body (string id)
```

The nb_sms_body function returns the body of a given message identifier.

id	the message identifier
----	------------------------

Returns the message's body text or an empty string on error.

2.4.7 nb_sms_delete

```
int nb_sms_delete (string id)
```

The nb_sms_delete function can be used to delete a message from the inbox.

id	the message identifier
----	------------------------

Returns zero on success or -1 on error.

2.5 E-Mail

2.5.1 nb_email_send

```
int nb_email_send (string rcpt, string subj, string msg)
int nb_email_send (string rcpt, string subj, string msg, string att)
```

The nb_email_send function can be used to send an E-Mail to a particular address.

rcpt	recipient's email address (e.g. abc@abc.com)
subj	email subject
msg	email content
att	an optional file to be sent as attachment

Returns zero on success or any error code. The attachment file will be deleted upon success. Please note that the E-Mail client must be properly configured prior to using this function.

The following functions can be used to send or manage E-Mails on a remote server.

Supported protocols are:

smtp	SMTP
smtps	SMTP over SSL
imap	IMAP
imaps	IMAP over SSL
pop3	POP3
pop3s	POP3 over SSL

2.5.2 nb_mail_list

```
int nb_mail_list (string usr, string pwd, string url)
```

The nb_mail_list function can be used to get the number of existing mails at a remote IMAP/POP3 server.

usr	the username used for authentication (can be empty)
pwd	the password used for authentication (can be empty)
url	IMAP/POP3 server URL (e.g. imap://mail.example.com)

Returns number of available mails or -1 on error. Please note that IMAP functions are limited to the INBOX folder.

2.5.3 nb_mail_delete

```
int nb_mail_delete (string usr, string pwd, string url, int index)
```

The nb_mail_delete function can be used to delete an E-Mail from a remote IMAP/POP3 server.

usr	the username used for authentication (can be empty)
pwd	the password used for authentication (can be empty)
url	IMAP/POP3 server URL (e.g. imap://mail.example.com)
index	the mail index to be deleted

Returns 0 on success.

2.5.4 nb_mail_fetch

```
struct nb_mail_fetch (string usr, string pwd, string url, int index)
```

The nb_mail_fetch function can be used to fetch an E-Mail from a remote IMAP/POP3 server.

usr	the username used for authentication (can be empty)
pwd	the password used for authentication (can be empty)
url	IMAP/POP3 server URL (e.g. imap://mail.example.com)
index	the mail index to be fetched

Returns void on error, otherwise a struct with the following fields:

from	sender's address
to	recipient's address
subject	subject of the mail
date	when the mail has been sent
body	content of the mail

2.5.5 nb_mail_send

```
int nb_mail_send (string usr, string pwd, string url, struct mail)
```

The nb_mail_send function can be used to send an E-Mail via a remote SMTP server.

usr	the username used for authentication (can be empty)
pwd	the password used for authentication (can be empty)
url	SMTP server URL (e.g. smtp://mail.example.com)
mail	a struct containing the fields from, to, subject and body

Return -1 on error, otherwise zero.

2.6 Digital I/O

2.6.1 nb_dio_get

```
int nb_dio_get (string port)
```

The nb_dio_get function retrieves the status of a digital I/O port.

port	DIO port to be queried (in1, in2, out1, out2)
------	---

Returns the DIO status (0 = off, 1 = on) or -1 on error.

2.6.2 nb_dio_set

```
int nb_dio_set (string port, int state)
```

The nb_dio_set function can be used to turn on/off the status of a digital output port.

port	digital output port to be configured (out1, out2)
state	new output status (0 = off, 1 = on)

Returns -1 on error.

2.6.3 nb_dio_count

```
int nb_dio_count (string port)
```

The nb_dio_count function can be used to get the number of toggles of the specified input port.

port	digital input port (in1, in2)
------	-------------------------------

Returns the number of toggles since the last measurement.

2.6.4 nb_dio_summary

```
string nb_dio_summary (void)
```

The nb_dio_summary function retrieves the status of all digital I/O ports. Returns a string holding the status of all ports or an empty string on error.

2.7 Configuration

2.7.1 nb_config_get

```
string nb_config_get (string key)
```

The nb_config_get function returns the currently configured value of a particular config parameter.

key	config key (e.g. "config.info")
-----	---------------------------------

Returns the config value or an empty string on error.

2.7.2 nb_config_set

```
int nb_config_set (string config)
```

The nb_config_set function can be used to set system configuration parameters.

config	config to be set in the form key=value (e.g. sdk.status=0)
--------	--

Returns -1 on error. The config values will be immediately applied to the system.

2.7.3 nb_config_done

```
int nb_config_done (void)
```

The nb_config_done function can be used to check if all modify scripts have completed after a config change.

Returns 0 on ready, 1 on busy and -1 on error.

2.7.4 nb_config_summary

```
string nb_config_summary (void)
```

The nb_config_summary function returns the current system configuration which corresponds to the delta of the factory configuration and the currently active configuration.

2.8 Status Information

2.8.1 nb_status

```
struct nb_status (string section)
```

The nb_status function will return various status values (as available through cli).

section the status section which shall be queried

The following sections can be specified:

info	System and config information
config	Current configuration
system	System information
configuration	Configuration information
license	License information
wwan	WWAN module status
wlan	WLAN module status
gnss	GNSS (GPS) module status
eth	Ethernet interface status
lan	LAN interface status
wan	WAN interface status
openvpn	OpenVPN connection status
ipsec	IPsec connection status
pptp	PPTP connection status
gre	GRE connection status
mobileip	MobileIP status
dio	Digital IO status
audio	Audio module status
can	CAN module status
uart	UART module status
ibis	IBIS module status
redundancy	Redundancy status
sms	SMS status
firewall	Firewall status
qos	QoS status
neigh	Neighborhood status
location	Current Location

Returns a struct holding the relevant status values (see 'status.are' example).

2.8.2 nb_status_summary

```
string nb_status_summary (void)
```

The nb_status_summary function will return a short summary about the current system status or an empty string on error.

2.9 Network Scanning

2.9.1 nb_scan_networks

```
struct nb_scan_networks (string ifc)
```

The `nb_scan_networks` function can be used to scan for available networks.

`ifc` the interface to scan (e.g. WLAN1 or Mobile1)

Returns a struct holding the relevant networks (see examples).

Please note that scanning a mobile interface will tear down any running WWAN connections. Same applies to WLAN interfaces operating in access-point mode. Therefore the scan interval is limited to 30 seconds.

2.10 USSD Queries

2.10.1 nb_ussd_query

```
string nb_ussd_query (string modem, string msg)
```

The `nb_ussd_query` function can be used to send Unstructured Supplementary Service Data messages to a particular modem. A typical USSD message starts with an asterisk (*) followed by digits that comprise commands or data. Groups of digits may be separated by additional asterisks. The message is terminated with a number sign (#).

`modem` the modem to query (e.g. Mobile1)
`query` the USSD message (e.g. *135#)

Returns a string holding the response of the USSD query.

2.11 File Transfers

The file transfer functions can be used to transfer files from or to a remote server using an URL according to RFC 3986.

Supported protocols are:

<code>http</code>	HTTP
<code>https</code>	HTTP over SSL
<code>ftp</code>	FTP
<code>ftps</code>	FTP over SSL
<code>tftp</code>	TFTP

Please note that all functions operate on files in the SDK sandbox (which is /mnt/sdk on the host system).

2.11.1 nb_transfer_get

```
int nb_transfer_get (string usr, string pwd, string url, string path)
int nb_transfer_get (string usr, string pwd, string url, string path,
                    string header)
```

The nb_transfer_get function can be used to get a file from a remote server. If both, username and password are specified, the function will perform authentication based on the relevant methods of HTTP or FTP.

usr	the username used for authentication (can be empty)
pwd	the password used for authentication (can be empty)
url	the URL where to get the file from
path	the local path where the file should be stored
header	custom HTTP headers

Returns -1 on error.

Custom HTTP headers have to be provided as follows:

```
<header1>\n<header2>\n<header3>\n...<headerN>
```

2.11.2 nb_transfer_put

```
int nb_transfer_put (string usr, string pwd, string url, string path)
int nb_transfer_put (string usr, string pwd, string url, string path,
                    string header)
```

The nb_transfer_put function can be used to transfer a file to a remote server. The usr/pwd arguments can be applied in order to perform authentication.

usr	the username used for authentication (can be empty)
pwd	the password used for authentication (can be empty)
url	the URL where to put the file to
path	the path to the local file which should be sent
header	custom HTTP headers

Returns -1 on error.

Custom HTTP headers have to be provided as follows:

```
<header1>\n<header2>\n<header3>\n...<headerN>
```

2.11.3 nb_transfer_post

```
int nb_transfer_post (string usr, string pwd, string url, string path,
                    string pp)
int nb_transfer_post (string usr, string pwd, string url, string path,
                    string pp, string resp)
int nb_transfer_post (string usr, string pwd, string url, string path,
                    string pp, string resp, string header)
int nb_transfer_post (string usr, string pwd, string url, string path,
                    string pp, string resp, string header, int flags)
```

The `nb_transfer_post` function can be used to transfer a file to a remote HTTP server. By using the POST method, additional parameters may be passed. The `usr/pwd` arguments can be applied in order to perform authentication.

<code>usr</code>	the username used for authentication (can be empty)
<code>pwd</code>	the password used for authentication (can be empty)
<code>url</code>	the URL where to put the file to
<code>path</code>	the path to the local file which should be sent
<code>pp</code>	additional POST parameters
<code>resp</code>	the path to response file
<code>header</code>	custom HTTP headers
<code>flags</code>	additional flags for the request

Supported flags:

1 (RAW)	POST parameters will be sent as raw data (such as JSON) instead of sending a file.
---------	--

Returns -1 on error.

POST parameters have to be provided as follows unless the RAW flag is specified:

```
<key1>=<val1>&<key2>=<val2>&<keyN>=<valN>
```

If provided, the server's response will be stored in the `resp` file.

Custom HTTP headers have to be provided as follows:

```
<header1>\n<header2>\n<header3>\n...<headerN>
```

2.11.4 nb_transfer_list

```
array nb_transfer_list (string usr, string pwd, string url)
array nb_transfer_list (string usr, string pwd, string url, string
                        header)
```

The `nb_transfer_list` function can be used to retrieve the list of files from a remote FTP server. The `usr/pwd` arguments can be applied in order to perform authentication.

<code>usr</code>	the username used for authentication (can be empty)
<code>pwd</code>	the password used for authentication (can be empty)
<code>url</code>	the URL specifying the directory to be listed
<code>header</code>	custom FTP commands (see RFC959)

Returns an array of struct describing the directory files. They are made up of:

<code>name</code>	name of the file
<code>size</code>	file size in bytes
<code>mode</code>	file mode and permission (see <code>chmod</code>)
<code>user</code>	owner username
<code>group</code>	owner groupname
<code>time</code>	modification time
<code>tm</code>	time struct of modification time

Custom FTP commands have to be provided as follows:

```
<command1>\n<command2>\n<command3>\n...<commandN>
```

2.11.5 `nb_transfer_delete`

```
int nb_transfer_delete (string usr, string pwd, string url)
int nb_transfer_delete (string usr, string pwd, string url, string
    header)
```

The `nb_transfer_delete` function can be used to delete a file from a remote FTP server. The `usr/pwd` arguments can be applied in order to perform authentication.

<code>usr</code>	the username used for authentication (can be empty)
<code>pwd</code>	the password used for authentication (can be empty)
<code>url</code>	the URL specifying the path of the file to be deleted
<code>header</code>	custom FTP commands (see RFC959)

Returns -1 on error.

Custom FTP commands have to be provided as follows:

```
<command1>\n<command2>\n<command3>\n...<commandN>
```

2.12 LED

2.12.1 nb_led_acquire

```
int nb_led_acquire (int led)
```

The nb_led_acquire function will acquire the specified LED for a particular script. Any associated system indication on that LED will be stopped until the LED is released again.

led	the LED number to be acquired (starting from left/top) or LED_ALL for all LEDs
-----	---

Returns -1 on error, otherwise zero. Please note that the status LED cannot be acquired.

2.12.2 nb_led_release

```
int nb_led_release (int led)
```

The nb_led_release function will release an acquired LED again.

led	the LED number to be released or LED_ALL for all LEDs
-----	---

Returns -1 on error, otherwise zero.

2.12.3 nb_led_set

```
int nb_led_set (int led, int mode)
```

The nb_led_set function will set the specified LED to a specific mode.

led	the LED number to be released or LED_ALL for all LEDs
mode	the LED mode to be applied

Returns -1 on error, otherwise zero.

LED modes can be specified by OR'ing the following colors and types:

LED_OFF	turn off LED
LED_COLOR_GREEN	color is green
LED_COLOR_RED	color is red
LED_COLOR_YELLOW	color is yellow
LED_SOLID	type is solid
LED_BLINK_FAST	type is fast blinking
LED_BLINK_SLOW	type is slow blinking

2.13 Config/Software Update

The following functions can be used to trigger a configuration or software update of the system. An Uniform Resource Locator (URL) can have the following format:

```
http://<username>:<password>@<host>:<port>/<path>
https://<username>:<password>@<host>:<port>/<path>
ftp://<username>:<password>@<host>:<port>/<path>
sftp://<username>:<password>@<host>:<port>/<path>
tftp://<host>/<path>
file:///<path>
```

Please bear in mind that calling `nb_update_software` will result in a system reboot. The `nb_update_config` call will restart the SDK which will terminate your scripts. Thus, it is recommended to exit the script after calling this function and check the result later on via `nb_update_status`.

If a file URL is used, the path must correspond to an absolute path to the root directory. Using `/tmp` for update tasks is currently not possible.

2.13.1 nb_update_status

```
string nb_update_status (void)
```

The `nb_update_status` function returns the status of the last or currently running update operation.

The following strings can be returned:

no update is running

```
xy update has started
xy update is running
xy update has succeeded
xy update has failed
xy is up-to-date
```

With `xy` being one of:

```
config
software
license
firmware
sshkeys
```

2.13.2 nb_update_config

```
int nb_update_config (string url)
int nb_update_config (string url, bool incremental)
```

The `nb_update_config` function will perform a configuration update from the specified URL. If `incremental` is false configuration parameters which are not included in the new configuration will be reset to factory defaults. Otherwise they will be omitted.

<code>url</code>	the URL of the config file
<code>incremental</code>	perform incremental update

Returns zero on success.

Please note that any running SDK script will be terminated during the update process. Thus, the script must exit after `nb_update_config()` has been called.

2.13.3 nb_update_software

```
int nb_update_software (string url)
```

The `nb_update_software` function will perform a software update from the specified URL.

<code>url</code>	the URL of the software image
------------------	-------------------------------

Returns zero on success.

2.13.4 nb_update_sshkeys

```
int nb_update_sshkeys (string url)
```

The `nb_update_sshkeys` function will perform an update of the SSH authorized keys.

<code>url</code>	the URL of the keys file
------------------	--------------------------

Returns zero on success.

2.14 Web Pages

The following functions can be used to implement your own pages within the Web Manager. Such a page will appear under the SDK menu as soon as it has been registered.

2.14.1 nb_page_register

```
int nb_page_register (int id, string title)
int nb_page_register (int id, string title, string submenu)
```

The `nb_page_register` function registers a new page with the specified identifier and title. If `submenu` is specified it will be hooked into the specified menu.

id	identifier
title	page title
submenu	submenu for page

Returns -1 on error, otherwise a page struct which can be used for other page functions.

2.14.2 `nb_userpage_register`

Registers a new page which is also accessible by non-admin users, see `nb_page_register()`.

2.14.3 `nb_page_unregister`

```
int nb_page_unregister (struct page)
```

The `nb_page_unregister` function can be used to unregister a page again.

page	page struct
------	-------------

Returns -1 on error, otherwise zero.

2.14.4 `nb_page_request`

```
struct nb_page_request (struct page)
```

The `nb_page_request` function listens for incoming requests.

page	page struct
------	-------------

Returns void on error, otherwise a request struct which holds possible GET and POST parameters.

2.14.5 `nb_page_respond`

```
int nb_page_respond (struct page, string fmt, ...)
```

The `nb_page_respond` function can be used to echo back a string to the request and can be called multiple times until `nb_page_finish` is called. It supports a format string and additional arguments that are formatted accordingly. Please refer to the `printf` function for more information about formatting options.

page	page struct
fmt	format string

Returns -1 on error and zero on success.

2.14.6 nb_page_finish

```
int nb_page_finish (struct page)
```

The nb_page_finish function can be used to finish a request. Any data will be passed to the client then.

page	page struct
------	-------------

Returns -1 on error and zero on success.

2.15 Voice

The voice control functions mentioned below can be used to control the behaviour of the voice gateway which is responsible for dispatching calls between Voice-Over-Mobile, SIP and Audio endpoints.

Calls are represented as structs which may look like:

```
struct(5): {
  .id = int: 12345
  .state = string[7]: "dialing"
  .calling = string[24]: "sip://user@192.168.1.254:5060"
  .called = string[22]: "vom://+123456789@Vom1"
};
```

The following states are possible:

routing	call is in routing state
dialing	call is in dialing state
alerting	call is in alerting state
active	call is active
hungup	call had hung up

In common, the functions can operate with either a call identifier or the call struct itself (e.g. if further parameters need to be provided).

Endpoints are represented as structs which may look like:

```
struct(3): {
  .id = int: 54321
  .desc = string[5]: "vom://Vom1"
```

```
.state = string[4]: "busy"
.volume = int: 7
};
```

Endpoints can be specified by ID or a descriptor which can be made up as follows:

Sip1	First SIP subscriber
Vom1	First Voice-Over-Mobile
Aud1	First Audio device

The following URLs are valid descriptors as well:

54321	endpoint ID
vom://++123	Voice-Over-Mobile number
vom://++123@Vom1	Voice-Over-Mobile number on Vom1
sip://user@192.168.1.254:5060	SIP address
sip://user	SIP user (must be subscribed)
aud://Aud1	Audio device
nil://Nil1	Null device

The following states are possible:

busy	endpoint is already holding a call
available	endpoint is ready to take a call

2.15.1 nb_voice_event

```
struct nb_voice_event (int timeout)
```

The nb_voice_event function listens for any new voice events.

timeout	timeout in seconds
---------	--------------------

Returns void on error, otherwise a struct holding the event type and the according call:

```
struct(2): {
.type = string[8]: "dispatched"
.call = struct(5): {
.id = int: 12345
.state = string[7]: "alerting"
.calling = string[24]: "sip://user@192.168.1.254:5060"
.called = string[22]: "vom://+123456789@Vom1"
}
};
```

The following event types are possible:

incoming	call is coming in from calling endpoint (ready to route)
outgoing	call is going out to calling endpoint (ready to route)
dialing	call is dialing the called endpoint
dispatched	call has been dispatched (alerting the called endpoint)
connected	call is connected to the called endpoint
hungup	call has hung up

2.15.2 nb_voice_endpoint_list

```
array nb_voice_endpoint_list (void)
```

The nb_voice_endpoint_list function lists all currently known endpoints. Returns void on error, otherwise an array holding the endpoint structs.

2.15.3 nb_voice_endpoint_get

```
struct nb_voice_endpoint_get (endpoint)
```

The nb_voice_endpoint_get function can be used to lookup or update a specific endpoint.

```
endpoint    endpoint struct, ID or descriptor
```

Returns void on error, otherwise the corresponding endpoint struct.

2.15.4 nb_voice_call_list

```
array nb_voice_call_list (void)
```

The nb_voice_call_list function lists all currently known calls. Returns void on error, otherwise an array holding the call struct.

2.15.5 nb_voice_call_get

```
struct nb_voice_call_get (call)
```

The nb_voice_call_get function can be used to lookup or update a specific call.

```
call    call struct or id
```

Returns void on error, otherwise the corresponding call struct.

2.15.6 nb_voice_call_dial

```
int nb_voice_call_dial (call)
```

The `nb_voice_call_dial` function can be used to dial a new call.

```
call    call struct
```

Returns -1 on error, otherwise the corresponding result.

2.15.7 nb_voice_call_accept

```
int nb_voice_call_accept (call)
```

The `nb_voice_call_accept` function can be used to accept calls in dispatch state.

```
call    call struct or id
```

Returns -1 on error, otherwise the result.

Remark: This function can be used to take a call for audio endpoints.

2.15.8 nb_voice_call_route

```
int nb_voice_call_route (call, endpoint)
```

The `nb_voice_call_route` function can be used to route incoming or outgoing calls to a dedicated endpoint.

```
call          call struct or id
endpoint      endpoint struct, ID or descriptor
```

Returns -1 on error, otherwise the result.

2.15.9 nb_voice_call_hangup

```
int nb_voice_call_hangup (call)
```

The `nb_voice_call_hangup` function can be used to hangup or drop a call.

```
call    call struct or id
```

Returns -1 on error, otherwise the result.

2.15.10 nb_voice_call_volume

```
int nb_voice_call_volume (endpoint, int level)
```

The `nb_voice_call_volume` function can be used to adjust the volume level of a call.

```
endpoint    endpoint struct, ID or descriptor
level      volume level (0 to 7)
```

Returns -1 on error, otherwise the result.

2.16 SNMP

The SNMP functions below offer facilities to

- expose certain OIDs to the SNMP agent
- extend the list of MIB entities
- run SET or GET commands
- issue SNMP traps

Only integer and octet string entities are currently supported.

2.16.1 nb_snmp_register

```
int nb_snmp_register (string name, int ext, string type, string mode)
```

The `nb_snmp_register` function will register a MIB entity.

```
name    name of entity
ext     the OID extension number of the entity
type    type of entity (i for integer, s for octet string)
mode    mode of entity
```

Returns -1 on error. Please note that only scalars are currently supported.

2.16.2 nb_snmp_link

```
int nb_snmp_link (void)
```

The `nb_snmp_link` function will link any registered MIB entities to the agent. The entities will be accessible from an SNMP client over `.1.3.6.1.4.1.<vendor>.10.90` after this function has been called. The default values are 0 for integers and an empty string for octet strings.

Returns -1 on error.

2.16.3 nb_snmp_update

```
int nb_snmp_update (string name, string value)
```

The nb_snmp_update function will update the specified MIB entity to the given value.

name	name of entity
value	value to be set

Returns -1 on error.

2.16.4 nb_snmp_listen

```
int nb_snmp_listen (int timeout)
```

By using the nb_snmp_listen function it is possible to get notified as soon as an entity has been set by a client.

timeout	timeout to wait in seconds
---------	----------------------------

Returns a struct containing the name and value of the set entity. Otherwise, void will be returned

2.16.5 nb_snmp_unlink

```
int nb_snmp_unlink (void)
```

The nb_snmp_unlink function disconnects any MIB entities from the agent. Returns -1 on error.

2.16.6 nb_snmp_host

```
int nb_snmp_host (string host, int port, int version, string community)
int nb_snmp_host (string host, int port, int version, string user,
string password, string auth, string priv)
int nb_snmp_host (string host, int port, int version, string user,
string password, string auth, string priv, string engine)
```

The nb_snmp_host function will set the SNMP host for running SET or GET requests. For an SNMPv1/v2 host the parameters are:

host	hostname or address
port	trap port
version	SNMP version (1 or 2)
community	community string

For an SNMPv3 host the parameters are:

host	hostname or address
port	port
version	SNMP version (3)
user	username
pass	password
auth	authentication protocol (MD5 or SHA)
priv	privacy protocol (DES or AES)
engine	engine ID

Returns -1 on error.

2.16.7 nb_snmp_get

```
void nb_snmp_get (string oid)
```

The nb_snmp_get function will perform a GET request for the specified OID. An SNMP host has to be set with nb_snmp_host prior to using that function.

oid	the queried OID
-----	-----------------

This function returns void in case an error occurred, an integer value if OID represent an integer or a string value if OID represents an octet string.

2.16.8 nb_snmp_set

```
int nb_snmp_set (string oid, string type, string value)
```

The nb_snmp_set function will perform a SET request for the specified OID. An SNMP host has to be set with nb_snmp_host prior to using that function.

oid	the OID to be set
type	the OID type ("i" for integer or "s" for octet string)
value	the value to be set

Returns -1 on error.

2.16.9 nb_snmp_traphost

```
int nb_snmp_traphost (string host, int port, int version, string
community)
int nb_snmp_traphost (string host, int port, int version, string user,
string password, string auth, string priv)
```

```
int nb_snmp_traphost (string host, int port, int version, string user,
string password, string auth, string priv, string engine)
```

The nb_snmp_traphost function will set the host for sending SNMP traps. The same parameters as for nb_snmp_host apply. Returns -1 on error.

2.16.10 nb_snmp_trap

```
string nb_snmp_trap (string oid, string type, string value)
```

The nb_send_trap function will send an SNMP trap with the specified OID to a remote traphost.

oid	SNMP object identifier of the trap
type	type of value to be sent ('n' for null, 'i' for integer and 's' for octet string)
value	value to be sent

Please note that a traphost has to be set with nb_snmp_traphost prior to using this function.

Returns -1 on error.

2.16.11 nb_snmp_inform

```
string nb_snmp_inform (string oid, string type, string value)
```

The nb_send_inform function will send an SNMPv3 inform with the specified OID to a remote traphost.

oid	SNMP object identifier of the trap
type	type of value to be sent ('e' for empty, 'i' for integer and 's' for octet string)
value	value to be sent

Please note that a traphost has to be set with nb_snmp_traphost prior to using this function.

Returns -1 on error.

2.17 MQTT

2.17.1 nb_mqttlib_new

```
int nb_mqttlib_new(string id, bool clean_session)
```

id String to use as the client id. If NULL, a random client id will be generated. If id is NULL, clean_session must be true.

clean_session set to true to instruct the broker to clean all messages and subscriptions on disconnect, false to instruct it to keep them.

Creates a mqtt handle. Use the returned handle in all other mqtt functions.

Returns a mqtt handle (mh). On failure:

-22 (ENOMEM) on out of memory.
 -12 (EINVAL) on invalid input parameters.

2.17.2 nb_mqttlib_free

```
int nb_mqttlib_free(int mh)
```

mh An mqtt handle, generated with nb_mqttlib_new().

Return values:

-22 (ENOMEM) on out of memory.
 -12 (EINVAL) on invalid input parameters.

2.17.3 nb_mqttlib_set_protocol_version

```
int nb_mqttlib_set_protocol_version (int mh, string protocol_version)
```

mh The connection to be used.

protocol_version The MQTT protocol version. (allowed values: "V31", "V311", "V5". defaults to: "V31")

Call this function before calling nb_mqttlib_connect().

Return values (check mqttlib-example.are for all return values):

0 (MOSQ_ERR_SUCCESS) on success
 1 (MOSQ_ERR_NOMEM) if an out of memory condition occurred.
 3 (MOSQ_ERR_INVALID) if the input parameters were invalid

2.17.4 nb_mqttlib_set_tls

```
int nb_mqttlib_set_tls (int mh, string cacert, string clientcert, string pkey)
```

mh	The connection to be used.
cacert	The certificate to be used.
clientcert	(Optional) PEM encoded certificate file for this client. If empty, pkey must also be empty and no client certificate will be used.
pkey	(Optional) Private key for this device (password encrypted key not supported). If empty, clientcert must also be empty and no client certificate will be used.

Call this function before calling `nb_mqttlib_connect()`.

Return values (check `mqttlib-example.are` for all return values):

0	(<code>MOSQ_ERR_SUCCESS</code>) on success
1	(<code>MOSQ_ERR_NOMEM</code>) if an out of memory condition occurred.
3	(<code>MOSQ_ERR_INVALID</code>) if the input parameters were invalid

2.17.5 `nb_mqttlib_set_tls_insecure`

```
int nb_mqttlib_set_tls_insecure(int mh, bool value)
```

mh	The connection to be used.
value	if set to false, the default, certificate hostname checking is performed. If set to true, no hostname checking is performed and the connection is insecure.

Call this function before calling `nb_mqttlib_connect()`.

Return values (check `mqttlib-example.are` for all return values):

0	(<code>MOSQ_ERR_SUCCESS</code>) on success
1	(<code>MOSQ_ERR_NOMEM</code>) if an out of memory condition occurred.
3	(<code>MOSQ_ERR_INVALID</code>) if the input parameters were invalid

2.17.6 `nb_mqttlib_set_user_pw`

```
int nb_mqttlib_set_user_pw (int mh, string user, string password)
```

mh	The connection to be used.
user	The username to be used.
password	The password to be used.

Call this function before calling `nb_mqttlib_connect()`.

Return values (check `mqttlib-example.are` for all return values):

0	(MOSQ_ERR_SUCCESS) on success
1	(MOSQ_ERR_NOMEM) if an out of memory condition occurred.
3	(MOSQ_ERR_INVALID) if the input parameters were invalid

2.17.7 nb_mqttlib_get_callback_connect

```
struct nb_mqttlib_get_callback_connect(int mh, int timeout, array
    property_ids)
```

md mosquitto descriptor.
timeout timeout in ms.

MQTT version 5 (optional):

property_ids array of property ids as integers. Only properties with those ids are returned (check mqttlib-example.are for property numbers).

Always check the return code with this function after a connect call.

return value is a struct containing:

rc: int
 0 - success
 1 - connection refused (unacceptable protocol version)
 2 - connection refused (identifier rejected)
 3 - connection refused (broker unavailable)
 and MQTT version 5 return codes
props: array (size 0-*) of array (size 2-3) [int property_id, ? property_value1, ? property_value2]

2.17.8 nb_mqttlib_get_callback_message

```
struct nb_mqttlib_get_callback_message(int mh, int timeout, array
    property_ids)
```

md mosquitto descriptor.
timeout timeout in ms.

MQTT version 5 (optional):

property_ids array of property ids as integers. Only properties with those ids are returned (check mqttlib-example.are for property numbers).

return value is a struct containing:

```
retain:      int
qos:         int
mid:         int
message:     struct {topic:string, message:string}
props:       array (size 0-*) of array (size 2-3) [ int property_id, ? prop-
              erty_value1, ? property_value2 ]
```

2.17.9 nb_mqttlib_get_callback_subscribe

```
struct nb_mqttlib_get_callback_subscribe(mh, timeout, array property_ids)
```

```
md          mosquito descriptor.
timeout     timeout in ms.
property_ids array of property ids as integers. Only properties with those ids
            are returned (check mqttlib-example.are for property numbers).
```

return value is a struct:

```
mid:        int
qos_count:  int
granted_qos: array
props:      array
```

```
On timeout  Empty struct.
```

2.17.10 nb_mqttlib_get_callback_unsubscribe

```
struct nb_mqttlib_get_callback_unsubscribe(int mh, int timeout, array
      property_ids)
```

```
md          mosquito descriptor.
timeout     timeout in ms.
```

MQTT version 5 (optional):

```
property_ids array of property ids as integers. Only properties with those ids
            are returned (check mqttlib-example.are for property numbers).
```

return value is a struct containing:

```
mid:        int
props:      array (size 0-*) of array (size 2-3) [ int property_id, ? prop-
              erty_value1, ? property_value2 ]
```

2.17.11 nb_mqttlib_connect

```
int nb_mqttlib_connect (int mh, string host, int port, int keepalive,
    array properties)
```

mh	The connection to be used.
host	IP-address or hostname of the broker to connect to.
port	network port to connect to (default value used by mqtt is 1883).
keepalive	The mqtt keepalive time (in seconds, recommended value ~60).

MQTT version 5 (optional):

properties	MQTT v5 properties to send.
------------	-----------------------------

array of property arrays. The array can be created the following way:

property1	= mkarray(MQTT_PROP_SESSION_EXPIRY_INTERVAL, 30);
property2	= mkarray(MQTT_PROP_MAXIMUM_PACKET_SIZE, 4096);
properties	= mkarray(property1, property2);

Call this function first before calling the other MQTT functions. To e.g. subscribe/publish on a topic on the broker you connect here, use the same "mh" handler when calling the corresponding MQTT function.

Return values (check mqttlib-example.are for all return values):

0	(MOSQ_ERR_SUCCESS) on success
1	(MOSQ_ERR_NOMEM) if an out of memory condition occurred.
3	(MOSQ_ERR_INVALID) if the input parameters were invalid

MQTT version 5:

2	(MOSQ_ERR_PROTOCOL) if any property is invalid for use with PUBLISH.
22	(MOSQ_ERR_DUPLICATE_PROPERTY) if a property is duplicated where it is forbidden.

2.17.12 nb_mqttlib_disconnect

```
int nb_mqttlib_disconnect (int mh, int reason_code, array properties)
```

mh	connection to be used.
----	------------------------

MQTT version 5:

reason_code	the disconnect reason code.
properties	(Optional) MQTT v5 properties to send.

Return values (check mqttlib-example.are for all return values):

0	(MOSQ_ERR_SUCCESS) on success
1	(MOSQ_ERR_NOMEM) if an out of memory condition occurred.
3	(MOSQ_ERR_INVALID) if the input parameters were invalid

MQTT version 5:

2	(MOSQ_ERR_PROTOCOL) if any property is invalid for use with PUBLISH.
22	(MOSQ_ERR_DUPLICATE_PROPERTY) if a property is duplicated where it is forbidden.

2.17.13 nb_mqttlib_publish

```
int nb_mqttlib_publish (int mh, string topic, string message, int qos,
    int retain, array properties)
```

The nb_mqttlib_publish function can be used to publish a mqtt message on a specified topic.

mh	The connection to be used.
topic	the topic the message will be published to topics are case sensitive and must consist of at least one character / is used as topic level separator topics shouldn't start with / because it wastes one layer + and # are wildcard characters and are not valid in publish topics \$ is a character reserved for mqtt system messages and can not be used
qos	quality of service used for the message 0 - publish at most one (fire and forget) 1 - publish at least once (message can also be delivered more than once) 2 - publish exactly once (guarantees that each message is received only once) higher qos levels result in more traffic
retain	is used to make the broker store the last message sent to a specific topic 0 - the message will not be stored 1 - the message will be stored and send to a new subscriber of that topic
message	the message that is going to be published

MQTT version 5 (optional):

properties	MQTT v5 properties to send.
------------	-----------------------------

Return values (check mqttlib-example.are for all return values):

0	(MOSQ_ERR_SUCCESS) on success
1	(MOSQ_ERR_NOMEM) if an out of memory condition occurred.
3	(MOSQ_ERR_INVALID) if the input parameters were invalid

MQTT version 5:

2	(MOSQ_ERR_PROTOCOL) if any property is invalid for use with PUBLISH.
22	(MOSQ_ERR_DUPLICATE_PROPERTY) if a property is duplicated where it is forbidden.

2.17.14 nb_mqttlib_set_will

```
int nb_mqttlib_set_will(int mh, string topic, string message, int qos,
    int retain, array properties)
```

Call this function before calling nb_mqttlib_connect(). Same parameters and return values as nb_mqttlib_publish().

2.17.15 nb_mqttlib_clear_will

```
int nb_mqttlib_clear_will(int mh)
```

mh The connection to be used.

Remove a previously configured will. Call this function before calling nb_mqttlib_connect(). Return values (check mqttlib-example.are for all return values):

0	(MOSQ_ERR_SUCCESS) on success
1	(MOSQ_ERR_NOMEM) if an out of memory condition occurred.
3	(MOSQ_ERR_INVALID) if the input parameters were invalid

2.17.16 nb_mqtt_publish

This function is deprecated and should no longer be used. It will be removed in future releases.

```
int nb_mqtt_publish (string host, int port, string username, string
    password, string topic, int qos, int retain, string message)
```

The nb_mqtt_publish function can be used to publish a mqtt message on a specified topic.

host	IP-address or hostname of the broker to connect to
port	network port to connect to (default value is 1883)
username	necessary if the mqtt broker requires authentication
password	optional password for the username mentioned above
topic	the topic the message will be published to topics are case sensitive and must consist of at least one character / is used as topic level separator topics shouldn't start with / because it wastes one layer + and # are wildcard characters and are not valid in publish topics \$ is a character reserved for mqtt system messages and can not be used
qos	quality of service used for the message 0 = publish at most one (fire and forget) 1 = publish at least once (message can also be delivered more than once) 2 = publish exactly once (guarantees that each message is received only once) higher qos levels result in more traffic
retain	is used to make the broker store the last message sent to a specific topic 0 = the message will not be stored 1 = the message will be stored and send to a new subscriber of that topic
message	the message that is going to be published

Returns -1 on error, otherwise zero.

2.17.17 nb_mqttlib_subscribe

```
int nb_mqttlib_subscribe (int mh, string topic, int qos, int options,
    array properties)
```

The nb_mqttlib_subscribe function can be used to subscribe to a specified topic.

mh	The connection to be used.
topic	<p>the topic the message will be published to</p> <p>topics are case sensitive and must consist of at least one character</p> <p>/ is used as topic level separator</p> <p>topics shouldn't start with / because it wastes one layer</p> <p>+ and # are wildcard characters and are not valid in publish topics</p> <p>\$ is a character reserved for mqtt system messages and can not be used</p>
qos	<p>quality of service used for the message</p> <p>0 - publish at most one (fire and forget)</p> <p>1 - publish at least once (message can also be delivered more than once)</p> <p>2 - publish exactly once (guarantees that each message is received only once)</p> <p>higher qos levels result in more traffic</p>

MQTT version 5 (optional):

options	<p>options to apply to this subscription, OR'd together. Set to 0 to use the default options, otherwise choose from the list: MQTT_SUB_OPT_NO_LOCAL: with this option set, if this client publishes to a topic to which it is subscribed, the broker will not publish the message back to the client. MQTT_SUB_OPT_RETAIN_AS_PUBLISHED: with this option set, messages published for this subscription will keep the retain flag as was set by the publishing client. The default behaviour without this option set has the retain flag indicating whether a message is fresh/stale. MQTT_SUB_OPT_SEND_RETAIN_ALWAYS: with this option set, pre-existing retained messages are sent as soon as the subscription is made, even if the subscription already exists. This is the default behaviour, so it is not necessary to set this option. MQTT_SUB_OPT_SEND_RETAIN_NEW: with this option set, pre-existing retained messages for this subscription will be sent when the subscription is made, but only if the subscription does not already exist. MQTT_SUB_OPT_SEND_RETAIN_NEVER: with this option set, pre-existing retained messages will never be sent for this subscription.</p>
properties	MQTT v5 properties to send.

Return values (check mqttlib-example.are for all return values):

0	(MOSQ_ERR_SUCCESS) on success
1	(MOSQ_ERR_NOMEM) if an out of memory condition occurred.
3	(MOSQ_ERR_INVALID) if the input parameters were invalid

MQTT version 5:

2	(MOSQ_ERR_PROTOCOL) if any property is invalid for use with PUBLISH.
22	(MOSQ_ERR_DUPLICATE_PROPERTY) if a property is duplicated where it is forbidden.

2.17.18 nb_mqttlib_unsubscribe

```
int nb_mqttlib_unsubscribe (int mh, string topic, array properties)
```

mh	The connection to be used.
topic	the unsubscription pattern. See mqttlib_subscribe for pattern description.

MQTT version 5:

properties	(Optional) MQTT v5 properties to send.
------------	--

Return values (check mqttlib-example.are for all return values):

0	(MOSQ_ERR_SUCCESS) on success
1	(MOSQ_ERR_NOMEM) if an out of memory condition occurred.
3	(MOSQ_ERR_INVALID) if the input parameters were invalid

MQTT version 5:

2	(MOSQ_ERR_PROTOCOL) if any property is invalid for use with PUBLISH.
22	(MOSQ_ERR_DUPLICATE_PROPERTY) if a property is duplicated where it is forbidden.

2.18 CAN

The following functions can be used to communicate with the CAN interface.

2.18.1 nb_can_setattr

```
int nb_can_setattr (string ifc, int bitrate, int listenonly, int restart)
```

The nb_can_setattr function can be used to set the attributes of a CAN interface.

ifc	name of interface (e.g. can0)
bitrate	bitrate (e.g. 500000)
listenonly	sets ctrlmode listenonly
restart	restart timeout in case of a bus-off (0 = disabled)

Returns -1 on error, otherwise zero.

2.18.2 nb_can_open

```
int nb_can_open (string ifc)
```

ifc	name of interface (e.g. can0)
-----	-------------------------------

The nb_can_open function enables the specified interface and returns a raw socket descriptor. Please note that the attributes (e.g. bitrate) have to be set in advance before opening any interface.

Returns -1 on error.

2.18.3 nb_can_close

```
int nb_can_close (int socket)
```

socket	socket descriptor
--------	-------------------

The nb_can_close function closes the specified socket descriptor and disables the associated interface. Returns -1 on error.

2.18.4 nb_can_setfilter

```
int nb_can_setfilter (int socket, int id, int mask)
```

The nb_can_setfilter function can be used to specify which CAN frames shall be filtered out and which shall be passed to the upper layers.

socket	socket descriptor
id	CAN filter ID
mask	CAN filter mask

Returns -1 on error.

A filter matches if `received-id & mask == id & mask`. The filter can also be inverted (CAN_INV_FILTER bit set in id) or it can filter for error frames (CAN_ERR_FLAG bit set in mask).

2.18.5 nb_can_sendonly

```
int nb_can_sendonly (int socket)
```

The nb_can_sendonly function can be used to disable the reception of CAN frames on the selected socket.

socket	socket descriptor
--------	-------------------

Returns -1 on error.

2.18.6 nb_can_recvmsg

```
struct nb_can_recvmsg (int socket, int timeout)
```

socket	socket descriptor
timeout	timeout to wait for a message (0 means infinite)

The nb_can_recvmsg function can be used to receive a raw message from the CAN bus. Returns void on error, otherwise it returns a msg struct containing the fields:

id	32 bit CAN ID + EFF/RTR/ERR flags
data	received data (max. 8 bytes)
len	size of received data

The ID can be examined using the following bit operators:

CAN_EFF_FLAG	EFF/SFF is set in the MSB
CAN_RTR_FLAG	remote transmission request
CAN_ERR_FLAG	error frame
CAN_SFF_MASK	standard frame format (SFF)
CAN_EFF_MASK	extended frame format (EFF)
CAN_ERR_MASK	omit EFF, RTR, ERR flags

2.18.7 nb_can_sendmsg

```
int nb_can_sendmsg (int socket, struct msg)
```

socket	socket descriptor
msg	message struct (id + data)

The nb_can_sendmsg function can be used to send a raw message to the CAN bus. Returns -1 on error, otherwise zero.

2.19 Bluetooth

Bluetooth devices can be configured for scanning or advertising (and also can be disabled) by calling the `nb_bt_mode` function. Discovered devices can be retrieved by using the `nb_bt_dev_list` and additional information about devices can be requested by the `nb_bt_dev_info` function.

Adapter properties (ada stands for adapter) can be accessed by the functions `nb_bt_ada_property_getall`, which is used to retrieve all properties for a single adapter and `nb_bt_ada_property_set`, which is used to modify a single adapter property.

Advertising (adv stands for advertising) properties can be accessed by the functions `nb_bt_adv_property_getall`, which is used to retrieve all advertising properties for a single adapter and `nb_bt_adv_property_set`, which is used to modify a single advertising property.

2.19.1 nb_bt_dev_list

```
struct nb_bt_dev_list (int adapter)
```

The `nb_bt_dev_list` function is used in scan mode and returns a list of devices (mac as string).

adapter the adapter to use (see below)

Returns a array of device string

The adapter can a a numerical index or one of the predefined constants:

```
BT1      The first adapter
BT2      The second adapter
```

2.19.2 nb_bt_dev_info

```
struct nb_bt_dev_info (int adapter, string device)
```

The `nb_bt_dev_info` function is used in scan mode and returns the device info of an existing device in the devices list (see see `nb_bt_dev_list`)

adapter the adapter to use (see below)
device device mac separated by colons e.g. "00:11:22:33:44:55")

Returns the device info of the referenced adapter as a struct with the following properties (some may be optional):

```
string Address (e.g. "00:11:22:33:44:55")
string Adresstype
```

```

string Name
string Alias
int Class
int Appearance
string Icon
boolean Paired
boolean Trusted
boolean Blocked
boolean LegacyPairing
int RSSI
boolean Connected
array of string UUIDs
string Modalias
int Adapter (e.g. BT1 or BT2)
array of struct { int Key, array of int Value } ManufacturerData
array of struct { string Key, array of int Value } ServiceData
int TxPower
boolean ServicesResolved
array of int AdvertisingFlags
array of struct { int Key, array of int Value } AdvertisingData
    
```

The adapter can a a numerical index or one of the predefined constants:

```

BT1    The first adapter
BT2    The second adapter
    
```

2.19.3 nb_bt_dev_del

```
int nb_bt_dev_del (int adapter, string device)
```

The nb_bt_dev_del function is used in scan mode to remove manually a bluetooth devices from devices list

```

adapter    the adapter to use (see below)
device     device mac (separated by colons e.g. "00:11:22:33:44:55")
    
```

On success, the function returns 0. Otherwise -1.

The adapter can a a numerical index or one of the predefined constants:

```

BT1    The first adapter
BT2    The second adapter
    
```

2.19.4 nb_bt_ada_property_getall

```
struct nb_bt_ada_property_getall (int adapter)
```

The nb_bt_ada_property_getall function returns all adapter properties

adapter the adapter to use (see below)

Returns all adapter properties as a struct with the following properties (some may be optional):

```
string Address (e.g. "00:11:22:33:44:55")
string Addresstype
string Name
string Alias
int Class
boolean Powered
boolean Discoverable
int DiscoverableTimeout
boolean Pairable
int PairableTimeout
boolean Discovering
array of string UUIDs
string Modalias
```

The adapter can a a numerical index or one of the predefined constants:

```
BT1        The first adapter
BT2        The second adapter
```

2.19.5 nb_bt_ada_property_set

```
int nb_bt_ada_property_set (int adapter, int type, value)
```

The nb_bt_ada_property_set function is used to set an adapter property

adapter the adapter to use (see below)
 type the property name (see below)
 value the property value to set. The type depends on the type parameter.

On success, the function returns 0. Otherwise -1.

The adapter can a a numerical index or one of the predefined constants:

```
BT1        The first adapter
BT2        The second adapter
```

Currently supported adapter property names are

```
BT_ADA_ALIAS        sets the bluetooth friendly name (string).
```

`BT_ADA_POWERED` switches the adapter power on or off (bool).

2.19.6 `nb_bt_adv_property_getall`

```
struct nb_bt_adv_property_getall (int adapter)
```

The `nb_bt_adv_property_getall` function returns all advertise properties

`adapter` the adapter to use (see below)

Returns all advertise properties as a struct with the following properties (some may be optional):

```
string Type
array of string ServiceUUIDs
array of string SolicitUUIDs
array of struct { int Key, array of int Value } ManufacturerData
array of struct { string Key, array of int Value } ServiceData
array of struct { int Key, array of int Value } Data
boolean Discoverable
int DiscoverableTimeout
string LocalName
array of string Includes
int Appearance
int Duration
int Timeout
```

The adapter can be a numerical index or one of the predefined constants:

```
BT1     The first adapter
BT2     The second adapter
```

2.19.7 `nb_bt_adv_property_set`

```
int nb_bt_adv_property_set (int adapter, int type, value)
```

The `nb_bt_adv_property_set` function is used to set an advertise property

`adapter` the adapter to use (see below)
`type` the property name (see below)
`value` the property value to set. The type depends on the type parameter.

On success, the function returns 0. Otherwise -1.

The adapter can be a numerical index or one of the predefined constants:

```
BT1    The first adapter
BT2    The second adapter
```

Currently supported advertisement property names are:

```
BT_ADV_LOCAL_NAME    sets the local name (type string)
```

2.19.8 nb_bt_mode

```
int nb_bt_mode (int adapter, int mode)
```

Then `nb_bt_mode` function is used to start scanning devices or start advertising or stop all.

```
adapter    the adapter to use (see below)
mode       the mode to set (see below)
```

On success, the function returns 0. Otherwise -1.

The adapter can a a numerical index or one of the predefined constants:

```
BT1    The first adapter
BT2    The second adapter
```

The mode can be one of the following:

```
BT_MODE_OFF    disables the device.
BT_MODE_SCAN   sets the device in scan-mode.
BT_MODE_ADV    sets the device in advertising moude.
```

2.20 Network

2.20.1 nb_gethostbyname

```
array nb_gethostbyname (string host)
```

The `nb_gethostbyname` function performs a DNS lookup for the given hostname and returns an array of resolved IP addresses.

```
host        the to be resolved host
```

Returns an empty array if host could not be resolved. Please note that a valid DNS server must be available when using this function.

2.20.2 nb_ifc_address

```
string nb_ifc_address (string interface)
```

The nb_ifc_address function can be used to obtain the first address of an interface.

interface	internal interface name (e.g. lan0)
-----------	-------------------------------------

Returns the interface address or an empty string on error.

2.20.3 nb_ping

```
int nb_ping (string host)
int nb_ping (string host, int timeout)
```

The nb_ping function will send ICMP ping packets to the specified host and returns whether the host correctly responded or not.

host	the host to ping
timeout	timeout waiting for a reply (in milliseconds)

Returns 1 in case the host is alive, 0 if down and -1 on error.

2.20.4 nb_arp_ping

```
int nb_arp_ping (string host)
```

The nb_arp_ping function will send an ARP request for the specified host and returns whether the host address has been successfully resolved.

host	the host address to ping
------	--------------------------

Returns 1 in case the specified host could be resolved, 0 if not and -1 on error.

2.20.5 nb_arp_gratuitous

```
int nb_arp_gratuitous (string ifc)
int nb_arp_gratuitous (string ifc, string host)
```

The nb_arp_gratuitous function will send an gratuitous ARP advert for the address of the specified interface (or the host address provided). This can be used to update the ARP tables of your neighbors.

ifc	the interface on which the packet should be sent
host	the host address to advert

Returns 1 in case the packet has been sent or -1 on error.

2.20.6 nb_etherwake

```
int nb_etherwake (string hwaddr, string ifc)
```

The nb_etherwake function will send a WakeOnLan magic packet to wake up sleeping hosts.

hwaddr	the Ethernet MAC address of the host
ifc	the interface on which the packet is sent

Returns 0 in case the packet has been successfully sent or -1 on error.

2.21 OPC-UA

The OPC-UA functions below offer facilities to

- connect to an OPC-UA server
- browse the node store
- search for nodes
- read/write values from/to nodes

Please note that only integer, string, double and boolean values are currently supported.

A node struct is usually represented as struct with the following fields:

namespace-index the namespace index node-id the node identifier browse-name the name shown when browsing display-name the display name

2.21.1 nb_opcua_connect

```
int nb_opcua_connect (string url)
```

The nb_opcua_connect function will connect to an OPC-UA server.

url	the server URL ("opc.tcp:// . . . : . . . ")
-----	--

Returns a client session descriptor or -1 on error.

2.21.2 nb_opcua_browse

```
int nb_opcua_browse (int client, int nindex, value nid, int depth)
```

The nb_opcua_browse function will browse recursively the children of the specified node.

client	the descriptor of the client session
nindex	the namespace index of the node
nid	the node identifier from where browsing starts
depth	specifies how deep the node tree will be descended

Returns an array of node structs or void on error.

2.21.3 nb_opcua_search

```
int nb_opcua_search (int client, value pattern)
```

The nb_opcua_search function will search in the entire namespace at the server for nodes matching the given pattern.

client	the descriptor of the client session
pattern	the pattern to search for

Returns an array of node structs with found nodes or void on error.

2.21.4 nb_opcua_read

```
value nb_opcua_read (int client, int nindex, int nid)
```

The nb_opcua_read function will read the value of the given node.

client	the descriptor of the client session
nindex	the namespace index of the node
nid	the node identifier

Returns the value of the given node or void on error.

2.21.5 nb_opcua_write

```
int nb_opcua_write (int client, int nindex, int nid, value val)
```

The nb_opcua_write function will change the value of the given node.

client	the descriptor of the client session
nindex	the namespace index of the node
nid	the node identifier
val	the new value for the node

Returns zero or -1 on error.

2.21.6 nb_opcua_disconnect

```
int nb_opcua_disconnect (int client)
```

The nb_opcua_disconnect function will disconnect the client from the server

client the descriptor of the client session

Returns -1 on error.

2.22 Certificates

2.22.1 nb_cert_install

```
int nb_cert_install (string cert, string password, string url)
```

The nb_cert_install function installs a certificate from the given URL.

Valid certificate identifiers are:

```
- root
- webserver
- sshd
- mqttbroker
- openvpn-tunnel1, openvpn-tunnel2, ...
- openvpn-tunnel1-client0, ...
- wlan1, ...
- wlan1-1-client1, ...
- ipsectunnel1
- other
```

cert	Certificate to be installed
password	Password to decrypt the certificate file (Empty-String if no password is needed)
url	URL to read from (see Config/Software Update for examples of valid URL strings)

Returns -1 on error.

2.22.2 nb_cert_create

```
int nb_cert_create (string cert)
```

The `nb_cert_create` function creates a certificate and installs it to the system. For valid certificate identifiers look at `nb_cert_install`.

`cert` Certificate to be installed

Returns -1 on error.

2.22.3 `nb_cert_enroll`

```
int nb_cert_enroll (string cert)
```

The `nb_cert_enroll` function installs a certificate from a SCEP server. For valid certificate identifiers look at `nb_cert_install`. The SCEP context has to be configured to use this function.

`cert` Certificate to be installed

Returns -1 on error.

2.22.4 `nb_cert_renew`

```
int nb_cert_renew (string cert)
```

The `nb_cert_renew` function renew a certificate via SCEP server. For valid certificate identifiers look at `nb_cert_install`. The SCEP context has to be configured to use this function.

`cert` Certificate to be installed

Returns -1 on error.

2.22.5 `nb_cert_is_revoked`

```
int nb_cert_is_revoked (string cert)
```

The `nb_cert_is_revoked` function check if a certificate has been revoked via SCEP server. This will download the CRL using the URL from the certificate and checks if the serial of the certificate is there. For valid certificate identifiers look at `nb_cert_install`. The SCEP context has to be configured to use this function.

`cert` Certificate to be installed

Returns true if the certificate has been revoked, false otherwise. -1 on error, please check the logs for more details

2.22.6 `nb_cert_erase`

```
int nb_cert_erase (string cert)
```

The `nb_cert_erase` function removes an installed certificate from the system. For valid certificate identifiers look at `nb_cert_install`.

<code>cert</code>	Certificate to be removed
-------------------	---------------------------

Returns -1 on error.

2.22.7 nb_cert_read

```
string nb_cert_read (string cert)
```

The `nb_cert_read` reads an installed certificate from the system. For valid certificate identifiers look at `nb_cert_install`.

<code>cert</code>	Certificate to read
-------------------	---------------------

Returns string holding the certificate as ASCII text. If there is no certificate installed for the requested certificate identifier, an empty string is returned.

2.23 Other

2.23.1 nb_syslog

```
int nb_syslog (string fmt, ...)
```

The `nb_syslog` function creates a message in the system log. The message will show up in log when the monitor log level for `sdkhost` is set to 6 or higher.

Please refer to `sprintf` for more information about the format string and additional arguments.

<code>msg</code>	message to be written to syslog
------------------	---------------------------------

Returns -1 on error.

2.23.2 nb_syslog_p

```
int nb_syslog_p (int loglvl, string fmt, ...)
```

Analog to the `nb_syslog` function the `nb_syslog_p` function creates a message in the system log. However, now it is possible to chose the priority of the message.

Please refer to `sprintf` for more information about the format string and additional arguments.

loglvl	log level of the message that will be written to syslog
	0 = emerg
	1 = alert
	2 = crit
	3 = err
	4 = warn
	5 = notice
	6 = info
	7 = debug
msg	message to be written to syslog

Returns -1 on error.

2.23.3 nb_event_get

```
string nb_event_get (int timeout)
```

The nb_event_get function will poll for system events.

timeout	max. number of seconds to wait for an event
---------	---

Returns the received event as string or an empty string in case the specified timeout has been reached.

2.23.4 nb_event_msg

```
struct nb_event_msg (int timeout)
```

The nb_event_msg function will poll for system events.

timeout	max. number of seconds to wait for an event
---------	---

Returns void in case the specified timeout has been reached or a struct with the event string and optional parameters:

```
struct(2): {
  .event = string: "call-incoming"
  .param = string[10]: "+123456789"
};
```

2.23.5 nb_reboot

```
void nb_reboot (int delay)
```

The nb_reboot function will trigger a system reboot.

delay the delay in seconds

2.23.6 nb_restart

```
int nb_restart (string service)
```

The nb_restart function will restart the specified service.

service the service to be restarted

Returns -1 on error, otherwise zero.

2.23.7 nb_wakeup

```
int nb_wakeup (int wakeup)
```

The nb_wakeup function will set the time when the system will reboot after a poweroff.

wakeup the wakeup time in seconds

Returns -1 on error, otherwise zero.

2.23.8 nb_poweroff

```
int nb_poweroff ()
```

The nb_poweroff function will power off the router.

2.23.9 nb_reset_factory

```
int nb_reset_factory ()
```

The nb_reset_factory function will reset the box to factory defaults. Returns -1 on error, otherwise zero. Please note that the system will reboot after this function has been called.

2.23.10 nb_reset_statistics

```
int nb_reset_statistics (string wanlink)
```

The nb_reset_statistics function will reset all statistics (e.g. link data counters).

wanlink the WAN link to reset (e.g. WANLINK1)

All interfaces will be reset if an empty wanlink (or "all" keyword) is used. Returns -1 on error, otherwise zero.

2.23.11 nb_wlan_tracking

```
struct nb_wlan_tracking (string wlanifc)
```

The nb_wlan_tracking function will return all WLAN stations seen on the given WLAN interface.

wlanifc the WLAN interface (e.g. WLAN1)

The nb_wlan_tracking function will return all WLAN stations seen on the given WLAN interface or an empty string on error.

2.23.12 nb_wanlink_activate

```
int nb_wanlink_activate (string wanlink)
```

The nb_wanlink_activate function will activate a deactivated WAN link.

wanlink the WAN link to activate (e.g. WANLINK1)

Returns -1 on error, otherwise zero.

2.23.13 nb_wanlink_deactivate

```
int nb_wanlink_deactivate (string wanlink)
```

The nb_wanlink_deactivate function will deactivate an active WAN link.

wanlink the WAN link to deactivate (e.g. WANLINK1)

Returns -1 on error, otherwise zero.

2.23.14 nb_wanlink_priorize

```
int nb_wanlink_priorize (string wanlink, int prio)
```

The nb_wanlink_priorize function can be used to change the priority of a WAN link.

wanlink the WAN link to prioritize (e.g. WANLINK1)

prio the new priority

Returns -1 on error, otherwise zero.

2.23.15 nb_wanlink_weight

```
int nb_wanlink_weight (string wanlink, int weight)
```

The nb_wanlink_weight function can be used to change the weight of a WAN link.

wanlink	the WAN link to prioritize (e.g. WANLINK1)
weight	the new weight

Returns -1 on error, otherwise zero.

2.23.16 nb_reset_debug_level

```
int nb_reset_debug_level (string service)
```

The nb_reset_debug_level function will reset the debug level of the given service.

service	the service to reset (e.g. link-manager)
---------	--

Returns -1 on error, otherwise zero.

2.23.17 nb_set_debug_level

```
int nb_set_debug_level (string service, int level)
```

The nb_set_debug_level function will set the debug level of the given service.

service	the service to set (e.g. link-manager)
level	the debug level to set (0-7)

Returns -1 on error, otherwise zero.

2.23.18 nb_get_debug_level

```
int nb_get_debug_level (string service)
```

The nb_get_debug_level function can be used to get the debug level of the given service.

service	the service to set (e.g. link-manager)
---------	--

Returns the requested level or -1 on error.