

# Quick Manual NRSW 3.7.2.102-HOTSPLOTS-2.5

---

**Project Name:** NRSW 3.7 patchimage for Hotspots WLAN Captive Portal

## Abstract:

This document represents the Quick Manual for the NetModule Router Software 3.7.2.102-HOTSPLOTS-2.5.

## Keywords:

NetModule, Software Development, NRSW, Release Note, Hotspots, WLAN, Captive Portal, Hotspot

## Document Control:

<b>Document:</b>	<b>Version</b>	1.0
	<b>File</b>	NRSW-RN-3.7.2.102-HOTSPLOTS-2.5
	<b>Status</b>	Valid
<b>Creation:</b>	<b>Role</b>	<b>Name</b>
	Author	Johann Juraschek
	Review	Ralf Fachet
<b>Approval</b>	<b>Role</b>	<b>Name</b>
	Senior Director Sales	Ralf Facet

## 1 Release Information

---

### NetModule Router Software:

Version: **3.7.2.102-HOTSLOTS-2.5**  
Date: **January 07, 2015**

### Supported Hardware:

<b>NetModule Router</b>	<b>Hardware Version</b>
NB1600	V1.0 - V3.1
NB2700	V1.0 - V2.4
NB3700	V2.0 - V4.0

### Unsupported Hardware:

**NetModule Router**  
NB1310  
NB22XX  
NB23XX  
NB25XX  
NB26XX

## 2 Features

---

Item	Description
1.	<p><b>Hotspots connectivity and Captive Portal</b></p> <p>In Services-&gt;Hotspots you can enter your Hotspots Hotspot Name and Key. After applying the login data, the VPN Tunnel to Hotspots will be configured automaticly and the Captive Portal is ready to work.</p>
2.	<p><b>OEM Configuration</b></p> <p>Due to the fact of a patchrelease this image is equipped with a preconfigured OEM configuration. This configuration is a good starting point for using the Hotspots Service. Please keep mind the OEM preconfiguration will delete the current Config on your device and install the OEM Configuration</p>

### 3 Manual

The following Section describes the steps you need to execute to get the Hotspots WLAN Hotspot running. Please do not install this image if you are not connected directly via ethernet to the router. You will lose any remote access during the installation.

Item	Description
1.	<p><b>Visit the web manager and set your administration password</b></p> <p>After connecting your PC to the router via ethernet you should get an ip address from the 192.168.1.0/24 range. Please visit the website <a href="http://192.168.1.1:8080">http://192.168.1.1:8080</a> and set your administration password.</p>
2.	<p><b>WWAN Link installation</b></p> <p>Please configure your WWAN Connection according to the needs of your SIM Card. If this step is successful you will see a steady Mob1 LED on the front of the router.</p>
3.	<p><b>Hotspots credentials</b></p> <p>Please enter your Hotspots credentials and apply them in the web manager page Services subpage Hotspot and apply them. If this step is successful you will see the VPN LED flashing and going in to a steady mode a few seconds after. The WLAN LED will keep flashing until the first WLAN Client is connected.</p>
4.	<p><b>Checking the Captive Portal</b></p> <p>Please connect to the WLAN access point with a WLAN Client (Laptop, Smartphone, Tablet). Depending on your Client device you will get the entry page directly or after you requested your first website in the web browser.</p>

## 4 Precautions

Items listed here represent the precautions you need to mind while installing this patchimage.

Item	Description
1.	<p><b>Upgrade/Downgrade</b> Please note that you cannot install a patchimage based on a 3.6.0.xxx NRSW Version after installing this patchimage. You need to install a generic 3.7.x.xxx image first.</p>
2.	<p><b>OEM Configuration</b> This patch image is equipped with a OEM Configuration. After installing this image your old Configuration is deleted. Please keep following specifications in mind:</p> <ul style="list-style-type: none"> <li>• The Web Manager can be only be reached over port 8080. (<a href="http://192.168.1.1:8080">http://192.168.1.1:8080</a>)</li> <li>• The WLAN Access Point is enabled by default, after the Hotspot service is enabled it will point directly to the Hotspots entrypage. Before it's an open WLAN Access Point.</li> </ul>
3.	<p><b>Troubleshooting</b> In case you cannot reach the router again after you installed the patchimage, please consider trying to reach the router with a static IP address.</p> <ul style="list-style-type: none"> <li>• Configure your PC e.g. with IP 192.168.1.254 NETMASK 255.255.255.0 and connect the PC via ethernet to the Ethernet 1 Port</li> <li>• Try to reach the web manager via <a href="http://192.168.1.1:8080">http://192.168.1.1:8080</a></li> <li>• On the NB1600 you can also reach the web manager on Ethernet 2 via <a href="http://192.168.2.1:8080">http://192.168.2.1:8080</a> (PC: 192.168.2.254)</li> <li>• On the NBN2700 and NB3700 you can also reach the web manager Ethernet 5 via <a href="http://192.168.5.1:8080">http://192.168.5.1:8080</a> (PC: 192.168.5.254)</li> </ul>

Changes:

Version	Date	Name	Reason
1.0	2013-07-22	juraschek	Release

**Copyright © 1998 - 2015 NetModule AG; All rights reserved**

This document contains proprietary information of NetModule AG. No part of the work described herein may be reproduced. Reverse engineering of the hardware or software is prohibited and is protected by patent law. This material or any portion of it may not be copied in any form or by any means, stored in a retrieval system, adopted or transmitted in any form or by any means (electronic, mechanical, photographic, graphic, optic or otherwise), or translated in any language or computer language without the prior written permission of NetModule AG.

The information in this document is subject to change without notice. NetModule AG makes no representation or warranties with respect to the contents herein and shall not be responsible for any loss or damage caused to the user by the direct or indirect use of this information. This document may contain information about third party products or processes. This third party information is out of influence of NetModule AG therefore NetModule AG shall not be responsible for the correctness or legitimacy of this information. If you find any problems in the documentation, please report them in writing by email to [info@netmodule.com](mailto:info@netmodule.com) at NetModule AG. While due care has been taken to deliver accurate documentation, NetModule AG does not warrant that this document is error-free.

"NetModule AG" and "NetModule Router" are trademarks and the NetModule logo is a service mark of NetModule AG.

All other products or company names mentioned herein are used for identification purposes only, and may be trademarks or registered trademarks of their respective owners.

The following description of software, hardware or process of NetModule AG or other third party provider may be included with your product and will be subject to the software, hardware or other license agreement.

NetModule AG is located at:

Meriedweg 11  
 CH-3172 Niederwangen  
 Switzerland  
[info@netmodule.com](mailto:info@netmodule.com)  
 Tel +41 31 985 25 10  
 Fax +41 31 985 25 11

For more information about NetModule AG visit the NetModule website at [www.netmodule.com](http://www.netmodule.com).